



Silicon edge graphic installation

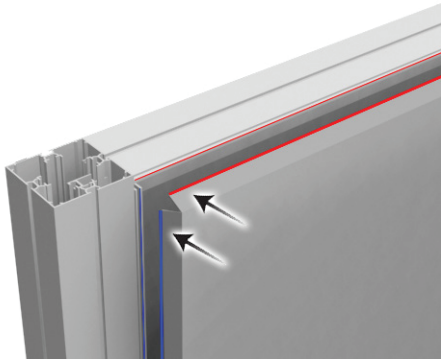

****Fold graphic over silicon****

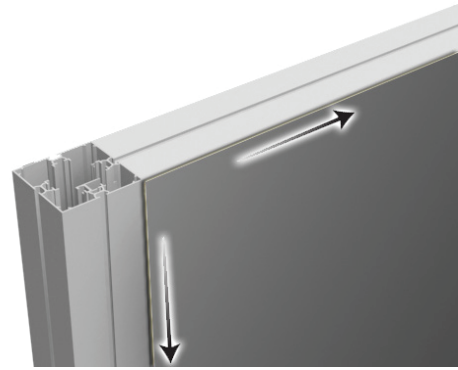

****Work out from corners****



It is best to push the corners in first



Step 1:

Start in corners and insert 8" to 10" of cover with SEG gasket into corner grooves of the frame.

Step 2:

Insert middles of each side into the groove and continue in an outward direction.

If SEG needs adjusting:

- If there is bunching it can be worked in by pushing/pulling the gasket towards the corners.
- If the gasket seems to long:
 - 1st, make sure gasket is completely flush in opposite corner
 - 2nd, it can be worked in by pushing/pulling the gasket towards the opposite end.

